homie

Washer Dryer

USER'S MANUAL

K-80 WD

Read This Manual

Read all instructions and explanations for the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on, ensure that the new owner always receives this operation instructions.



CAUTION: HOT SURFACE !



CAUTION: RISK OF FIRE !

CONTENTS

SAFETY INSTRUCTIONS

- Safety Instructions 2

INSTALLATION

- Product Description 9
- Installation 10

OPERATION

- Quick Start 13
- Before Each Washing 15
- Detergent Dispenser 16
- Control Panel 17
- Programmes..... 18
- Option..... 22

MAINTENANCE

- Cleaning and Care 26
- Trouble Shooting 29
- Technical Specifications 30
- Product Fiche 31

■ Safety Instructions

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

⚠ Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

ⓘ Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

⚠ Warning!

ELECTRIC SHOCK HAZARD

•If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
•If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
Risk of electric shock!

SAFETY INSTRUCTIONS

•The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
•Children should be supervised that they do not play with the appliance.
•Children 3 years and under shall be kept away from the appliance or continuously supervised.
•Animals and children may climb into the machine. Check the machine before every operation.
•Do not climb or sit on the appliance.

INSTALLATION LOCATION AND SURROUNDING

•All washing and additional substances are to be kept in a safe place out of the reach of children.
•Do not install the machine on a carpet floor. The obstruction of the openings by a carpet can damage the machine.
•Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
•Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes let the appliance dry in the open air.
•The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washer dryer.

•Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see „Maintenance - Cleaning of drain pump filter") to avoid damages caused by frost.
•Never use flammable sprays or substances in the immediate proximity of the appliance.

INSTALLATION

•Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
•This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
•Mains plug must be accessible after installation.
•Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
•Before using the washer dryer, the product shall be calibrated.
•Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
•The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
•Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

ELECTRICAL CONNECTION

•Make sure the supply cable is not trapped by the machine, it can get damaged.
•Connect the product to a grounded outlet protected by a fuse complying with the values in the " Technical specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.

•Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

⚠ Warning!

•Don´t use multiple plugs or extension cords.
•The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
•Do not pull the plug out of the mains outlet if there is flammable gas around.
•Never pull out power plug with wet hands.
•Always pull at the plug, not at the cable.
•Always unplug the appliance if it is not being used.

WATER CONNECTIONS

•Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
•Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
•The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
•Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

OPERATION AND MAINTENANCE

⚠ Warning!

•Never stop the washer dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat can dissipate.
•The washer dryer is not to be used if industrial chemicals have been used for cleaning. Risk of explosion.

•Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
•Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
•Remove all objects from pockets such as lighters and matches before use the appliance.
•Thoroughly rinse items that have been washed by hand.
•Do not dry unwashed items in the appliance.
•Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
•Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine
•Fabric softeners or similar products should be used as recommended in their instructions.
•Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
•Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.

•Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
•Never pour water over the appliance for cleaning purpose. Risk of electric shock!
•Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of not authorized persons.

TRANSPORT

•Before Transport:
-Bolts shall be reinstalled to the machine by a specialized person
-Accumulated water shall be drained out of the machine
•This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

INTENDED USE


The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.
Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result of it.
•This appliance is intended to be used in household and similar applications such as:
-Staff kitchen areas in shops, offices and other working environments;
-Farm houses;
-By clients in hotels, motels and other residential type environments;
-Bed and breakfast type environments;
-Areas for communal use in blocks of flats or in launderettes.

Packaging/Old appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.


Product Description

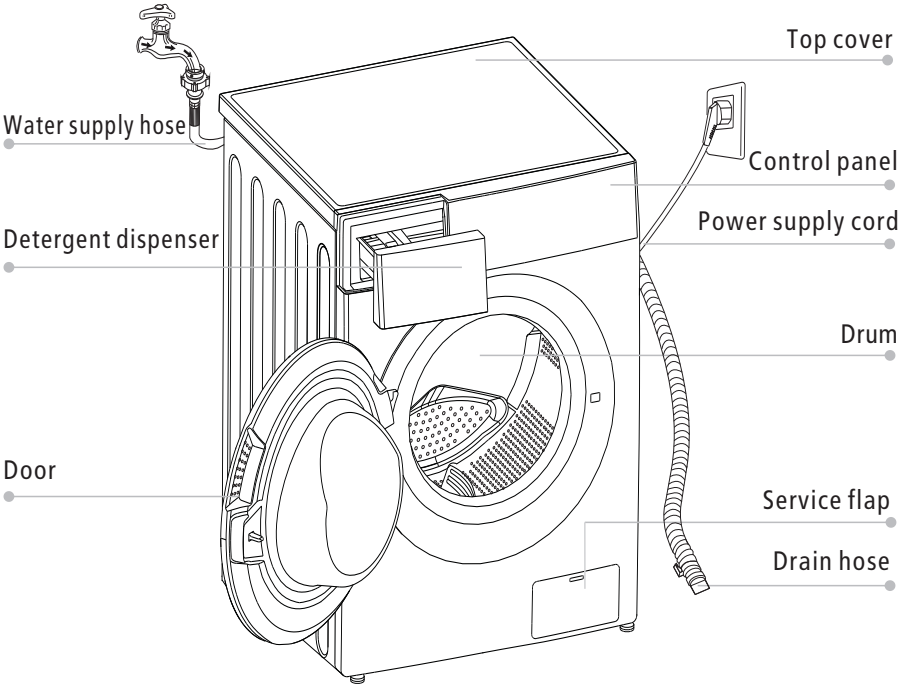

Note!

- The product picture is for illustration only, please refer to real product as reference.

Accessories

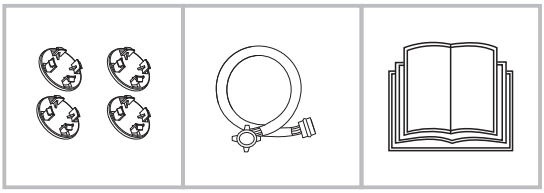


4 x Cover caps	1 x Supply hose cold water	1 x Owner's manual


Installation

Installation area

⚠ Warning!

- Stability is important to prevent the product from wandering! Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture

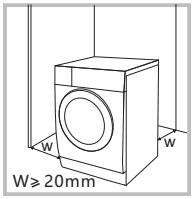

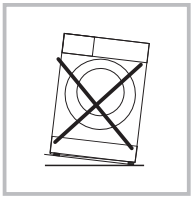


Before installing the machine, the location characterized as follows shall be selected:

1.Rigid, dry, and level surface
2.Avoid direct sunlight
3.Sufficient ventilation
4.Room temperature is above 0°C
5.Keep far away from the heat sources such as coal or gas burning appliances.

Unpacking the washer dryer

⚠ Warning!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.

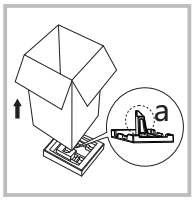

1. Remove the cardboard box and styrofoam packing.
2. Lift the washer dryer and remove the base packaging.Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.


Remove transport bolts

⚠ Warning!


- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner.

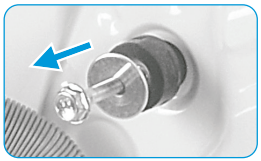

Remove the bolts including the rubber parts and keep them for future use.

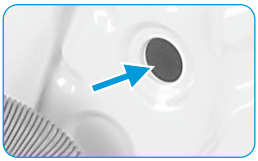


Close the holes using the cover caps.

Levelling the washer dryer

⚠ Warning!

- The lock nuts on all four feet must be screwed tightly against the housing.

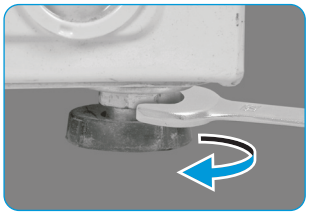


1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level and steady.

Connect the water supply hose

⚠ Warning!

To prevent leakage or water damage, follow the instructions in this chapter

- Do not kink, crush or modify water inlet hose.

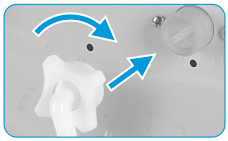

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.



Note!

- Connect manually, do not use tools. Check if the connections are tight.


Drain Hose

⚠ Warning!


- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result of water leakage.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

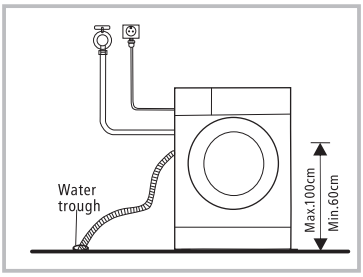

2.Connect it to the branch drain pipe of the trough.

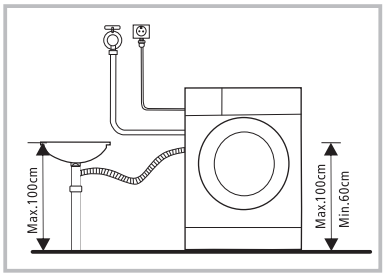

Quick Start

Caution!


- Before washing, please make sure the washer dryer is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, start the Cotton program at 90°C without laundry and detergent.

Calibration

It's recommended to calibrate the washer dryer, so that provide the best performance.
The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.

1- Remove all accessories from the drum and close the door;
2- Insert the mains plug to the socket;
3- Switch on the washer dryer and press "Temp." and "Dry." simultaneously for 10 seconds until "t19" is displayed;
4- Press [▷||] to start the appliance and wait till "****" is displayed.

1. Before Washing

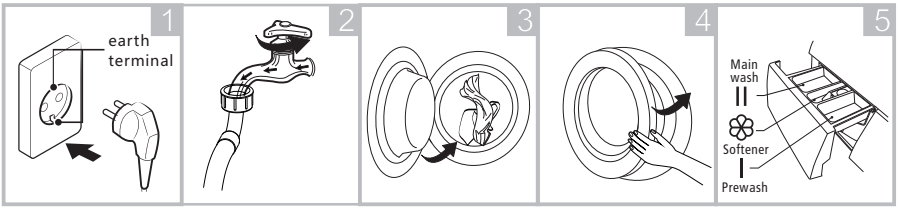


Plug in | Open tap | Load | Close door | Add detergent

Note!

- Detergent need to be added in compartment I if the pre-wash function is selected.

2. Washing

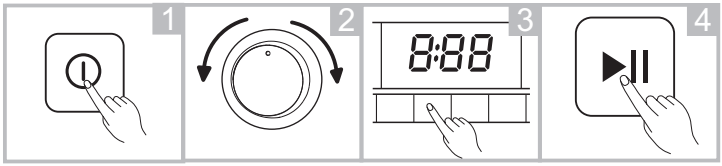


Power On | Select programme | Select function or remain default settings | Press Start/Pause to start the program

3. After Washing


Buzzer beep and "End" on display.

■ Before Each Washing

- The ambient temperature of the washer dryer should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

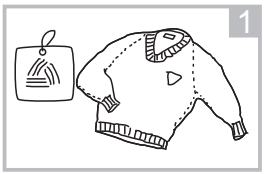


Check the care label

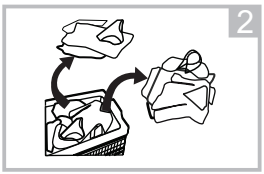


Sort laundry according to color and textile type




Take all items out of the pockets

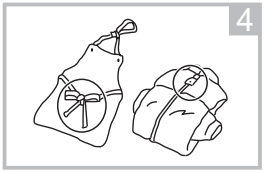

Tie together long textile strips and belts, close zips and button

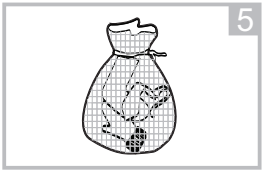

Put small items into a laundry bag

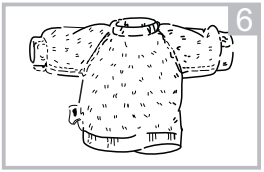


Turn easy-pilling and long-pile fabric inside out

⚠ Warning!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.

■ Detergent Dispenser

I Pre wash
II Main wash
❀ Softener
Release button to pull out the dispenser

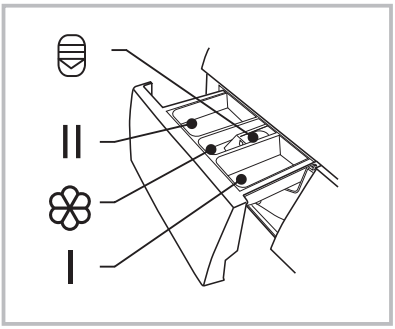

Caution!

- Detergent only need to be added in "compartment I "after selecting pre-wash function.

Programme	I	II / 💧	❀
Cotton	○	●	○
Mix	○	●	○
Baby Care	○	●	○
20℃		●	○
Drum Clean			
Spin Only			
Wash and Dry		●	○


Programme	I	II / 💧	❀
Rinse & Spin			○
Wool		●	○
ECO 40-60		●	○
Intensive		●	○
Quick 15'		●	○
Dry Only			
1h W/D		●	○

● Means must ○ Means optional

Note!

- As for the agglomerated or ropy detergent or additive, before they are poured into the detergent box, it is suggested to use some water for dilution to prevent the inlet of detergent box from being blocked and overflowing while filling water.
- Please choose suitable type of detergent for the various washing temperature to get the best washing performance with less water and energy consumption.

Control Panel

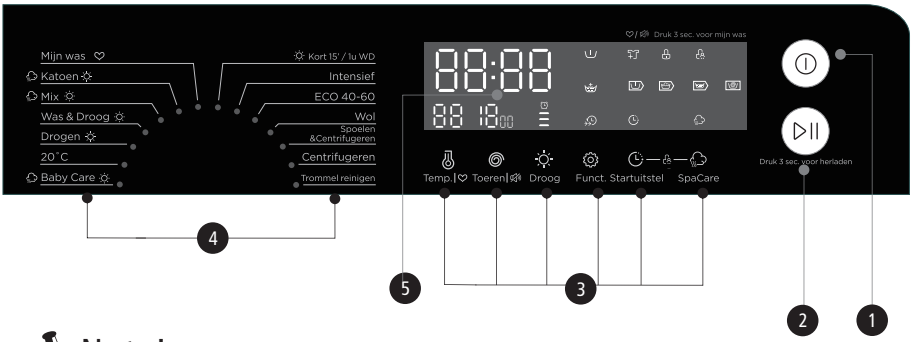

Note!

- The chart is for reference only, Please refer to real product as standard.

1 On/Off

Product is switched On/Off.

2 Start/Pause

Press the button to start or pause the washing cycle.

3 Option


This allows you to select an additional function and will light when selected.

4 Programmes

Available according to the laundry type.

5 Display

The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

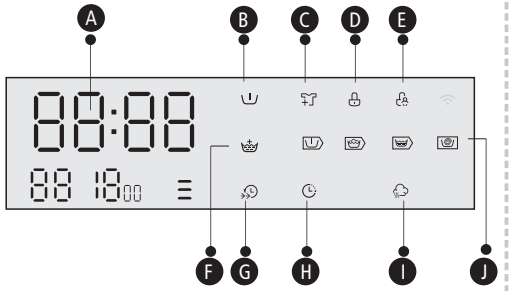

A Display

Wash Time 125	Delay Time 2H
Speed 400	Error E30
End End	Temp. 30

B Pre Wash **C Reload**

D Door Lock **E Child Lock**

F Extra Rinse **G Speed Wash**

H Delay **I SpaCare**

J Pre Wash-Wash-Rinse-Spin

Programmes

	Programme	Load(kg)	Default Time
		8.0	8.0
☼	Cotton	8.0/6.0	3:39
☼	Mix	4.0/4.0	1:20
☼	Wash and Dry	6.0/6.0	5:04
☼	Dry Only	-/6.0	4:14
	20℃	4.0	1:01
☼	Baby Care	4.0/4.0	1:42
	Drum Clean	–	1:18
	Spin Only	8.0	0:12
	Rinse&Spin	8.0	0:20
	Wool	2.0	1:07
	ECO 40-60	8.0	3:35
	Intensive	8.0	3:48
☼	Quick 15'/1h WD	2.0/1.0	0:15

Note!

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

■ Programmes

Cycle	Nominal capacity in kg	Cycle duration in hours and minutes	Energy consumption in kWh/operalling cycle	Water consumption in liter//operalling cycle	Highest temperature ature ℃	residual moitsure in % /spin speed
20℃	4.0	1:01	0.15	50	20	65% / 1000
Cotton(60℃)	8.0	3:44	1.498	70	60	53% / 1400
Intensive	8.0	3:48	1.100	70	40	70% / 800
Mix	8.0	1:20	0.75	65	40	65% / 1000
Quick 15'	2.0	0:15	0.030	40	Cold	75% / 800
ECO 40-60	8.0	3:38	0.871	64	38	53% / 1400
	4.0	2:48	0.530	46	38	53% / 1400
	2.0	2:48	0.205	33	21	53% / 1400
Wash Dry	6.0	9:30	4.400	108	39	0%/1400
	3.0	6:40	2.400	63	27	0%/1400

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme are indicative only.
- Concerning to Regulation(EU) No 1061/2010,
  The EU energy efficiency class is: A
  Energy test program: Intensive;Speed:The highest speed; Temp.: 60℃;
  Other as the default.
  Half load for 8.0kg machine:4.0kg.
- Concerning to Regulation(EU) 2019/2023,
  The EU energy efficiency class is: E
  Energy test program: ECO 40-60/Wash & Dry.
  ECO 40-60: as the default
  Half load for 8.0kg machine:4.0kg.
  Quarter load for 8.0kg machine 2.0kg.
  Wash and dry : dry level:≡ (Extra Dry),Other as the default.
  Dry load for 8.0kg machine: 6.0kg.
  Half load for 6.0kg machine:3.0kg.

1) The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
2) Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
3) The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2023.
4) The Wash and Dry programme, dry level setting Extra Dry is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle, and to dry it in such a way that it can be immediately stored in a cupboard. This programme is used to assess the compliance with the regulation (EU) 2019/2023.

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household washer-dryer up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

⚠ Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.

Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
20℃	20℃ default, can choose cold water.
ECO 40-60	Default 40℃,not selectable,suitabale for laundry washing at about 40℃-60℃.
Quick 15'	
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.
1h W/D	For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts).
Wool	Hand or machine-washable wool or richwool textiles.Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
Spin Only	Extra spin with selectable spin speed.
Rinse&Spin	Extra rinse with spin.
Intensive	To increase the washing effects, washing time is increased.
Drum Clean	Specially set in this machine to clean the drum and tube. It applys 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.
Dry Only	Select it to dry clothes, the temperature is different .The drying time according to the load .
Wash and dry	The standard energy program.

Option

Cycle	Default Temp.(℃)	Default spin speed in rpm	Additional functions
		1400	
Cotton	40	1400	
Mix	40	800	
Wash and Dry	–	1400	
Dry Only	–	1400	
20℃	20	1000	
Baby Care	60	800	
Drum Clean	90	--	
Spin Only	–	1000	
Rinse &Spin	–	1000	
Wool	40	600	
ECO 40-60	–	1400	
Intensive	40	800	
Quick 15'/1h WD	Cold	800	

Note!

- For the maximum spin speed, program time, and other details of the ECO 40-60 and Wash and Dry programs, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment. If an adjustment is not possible for a cycle.

■ Option

Delay

Delay

Set the Delay function:

1. Select a programme; 2.Press the Delay button to choose the time(the delaying time is 0-24 H.);
3.Press [Start/Pause] to commence the delay operation



Cancel the Delay function:

Press the [Delay] button until the display be 0H.It should be pressed before starting the programme. If the programme already started, should switch off programme to reset a new one.

ⓘ Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, the program will continue.

Pre Wash

Pre Wash

The Prewash function can get an extra wash before main wash,it is suitable for washing the dust rises to surface of the clothes;You need to put detergent into the Case (I) when select it.

Extra Rinse

Extra Rinse

The laundry will undergo extra rinse once after you select it.

Speed Wash

Speed Wash

The function can decrease the washing time.

♡

My Cycle

To memory the frequently used programme.

After choosing the programme and setting the options, press [Temp.] 3 sec. before start to wash.The default setting course is Cotton.

Temp.

Temp.

Press the button to regulate the temperature(Cold,20℃,30℃, 40℃,60℃,90℃)

Speed

Speed

Press the button to change the speed.

1400: 0-400-600-800-1000-1200-1400 1500: 0-400-600-800-1000-1200-1400-1500



Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To press [Start/Pause] for 3 sec. to reload, and start the clothes adding in the midway function. Please follow the steps as bellow:

1.Wait until the drum stops rotation.
2.The door lock is unlocked.
3.Close the door when the clothes are reloaded and press the [Start/Pause] button.



Press[Start/Pause]3sec. Reload the clothes Start



SpaCare

SpaCare function can be selected by choose "Cotton","Mix""Bed Linen" and "Baby Care".
The customers can see the steam in the drum when operate SpaCare function. The SpaCare cannot be used simultaneously With Pre Wash and Speed Wash.


Caution!

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.

OPERATION

Child Lock

To avoid mis operation by children.



Press [Delay] and [SpaCare]
3 sec. till buzzer beep.

Caution!

When child lock is activated and program starts, child lock indicator will switch on, and the CL and remaining time on the display are alternately displayed in 0.5s. Press the other buttons will make child lock indicator flash for 3s. when program finish,CL and END alternate for 10s in 0.5s, then the child lock lights flash for 3s

- Only press and hold the two button can release child lock, even power off, switch off and program end
- The "Child Lock" will lock all buttons except Power button and Child Lock button
- Please release child lock before selecting program and staring washing

Mute the buzzer



Choose the Programme

Press the [Speed]button for 3sec., the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

Caution!

- After Muting the buzzer function, the sounds will not be activated any more.

Dry

Press the Dry button continuously to choose the dry level: Extra Dry/Normal Dry (Normal)/ Gentle Dry(Soft).


- Extra Dry:Need to wear clothes immediately ,we can choose this function;
- Normal Dry(Normal) : The normal dry procedure;
- Gentle Dry(Soft):Only to dry slightly and then is just ok;
- Timed Dry:We can choose this function to dry clothes for a specific time.

Cleaning and Care

⚠ Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

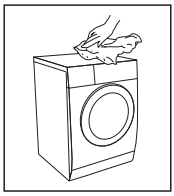

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately. Never use sharp items to clean the appliance.

ⓘ Caution!

- Never use abrasive or caustic agents. formic acids or its diluted solvents or similar substances, like alcohol or chemical products.


Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

Note!

- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

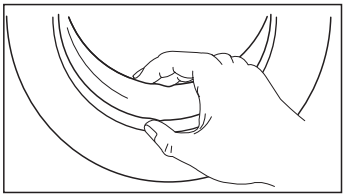


Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.
Remove any coins, buttons and other objects from the seal after each wash.
Clean the Door Seal and Glass every month to ensure the normal operation of the appliance.


Cleaning the Inlet Filter


Note!


- Diminishing water flow is a sign that the filter need to be cleaned.

1. Close the tap and remove the water supply hose from it.
2. Clean the filter with a brush.
3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long nose pliers.
4. Use a brush to clean the filter.
5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

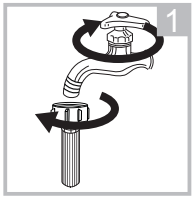

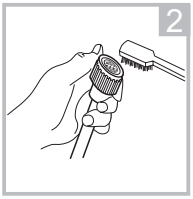


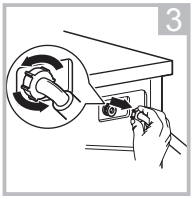

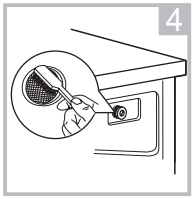


Clean The Detergent Dispenser


1. Press down the release [ ] on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.

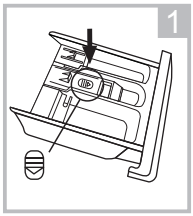


Press the release and remove the dispenser drawer

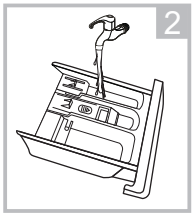

Clean the dispenser drawer and the softener cover under water

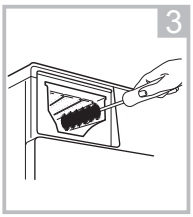

Clean the recess with an soft brush

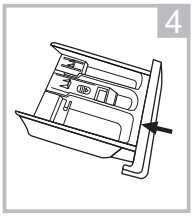

Insert the dispenser drawer


Note!

- Do not use abrasive or caustic agents to clean plastic parts.


Cleaning the Drain Pump Filter

⚠ Warning!


- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Allow the water to cool down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

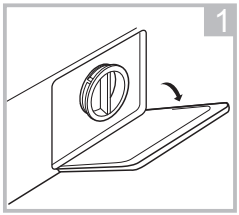


Open the lower cover cap

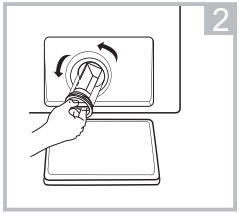

Open the filter by turning to the counter clockwise

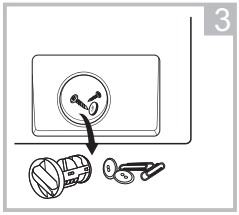

Remove extraneous matter

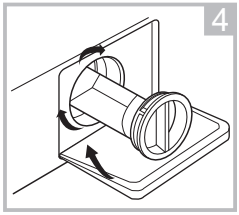

Close the lower cover cap

ⓘ Caution!

- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can´t be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts still in place. Floor is not solid or level.	Check if the fixing bolts have been removed Make sure the appliance is installed on a solid and level floor.

Error Codes

Description	Possible cause	Solution
E30	Door is not closed properly	Close the door properly and restart.
E10	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

■ Customer service

Spare part for your appliance are available for a minimum of 10 years.
In case of questions please contact our customer service at:

⚠ Warning!

Risk of electric shock

- Never try repair an appliance which is defective of presumed to be defective. You may put your own and future users' lives in danger.Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recogniced!


Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

■ Technical Specifications

Power Supply	220-240V~,50Hz
MAX.Current	10A
Standard Water Pressure	0.05MPa~1MPa

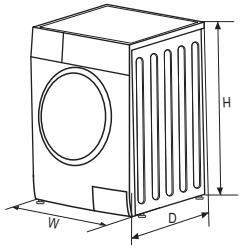

Model	Washing Capacity	Dimension (W*D*Hmm)	Net Weight	Rated Power
K-80 WD	8.0kg	595*475*850	65kg	1900W

Product Fiches

Supplier's name or trade mark([a]) ([d]): HOMIE B.V.

Supplier's address([a]) ([d]): HOMIE B.V. Wagenmakersweg 3 NL-3449 HV Woerden

Model identifier([a]): K-80 WD

General product parameters:

Parameter	Value		Parameter	Value		
Rated capacity (kg)	Rated capacity ([c])	6.0	Dimensions in cm ([a]) ([d])	Height	85	
	Rated washing capacity ([b])	8.0		Width	60	
				Depth	47	
Energy Efficiency Index	EEI_W ([b])	60.0	Energy efficiency class	EEI_W ([b])	B	([e])
	EEI_{WD} ([c])	82.0		EEI_{WD} ([c])	E	([e])
Washing efficiency index	I_W ([b])	1.031	Rinsing effectiveness (g/kg dry textile)	I_R ([b])	5.0	
	J_W ([c])	1.031		J_R ([c])	5.0	
Energy consumption in kWh per kg per cycle, for the washing cycle of the household washer-dryer, using the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used	0.544		Energy consumption in kWh per kg per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual energy consumption will depend on how the appliance is used	3.768		
Water consumption in litre per cycle, for the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	48		Water consumption in litre per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	90		
Maximum temperature inside the treated textile (°C) for the washing cycle of the household washer- dryer, using the eco 40-60 programme	Rated washing capacity	38	Maximum temperature inside the treated textile (°C) for the washing cycle of the household washer-dryer, using the wash and dry cycle	Rated capacity	36	
	Half	35		Half	27	
	Quarter	22				
Spin speed (rpm) ([b])	Rated washing capacity	1400	Weighted remaining moisture content (%) ([b])	53.9		
	Half	1400				
	Quarter	1400				

Eco 40-60 programme duration (h:min)	Rated washing capacity	3:38	Spin-drying efficiency class ([b])	B ([c])	
	Half	2:48			
	Quarter	2:48			
Airborne acoustical noise emissions during the spinning phase for the eco 40-60 washing cycle at rated washing capacity (dB(A) re 1 pW)	76		wash and dry cycle duration (h:min)	Rated capacity	9:30
				Half	6:40
Type	free-standing		Airborne acoustical noise emission class for the spinning phase for the eco 40-60 programme at rated washing capacity	B ([c])	
Off-mode (W) (if applicable)	0.50		Standby mode (W) (if applicable)	N/A	
Delay start (W) (if applicable)	4.00		Networked standby (W) (if applicable)	N/A	

Minimum duration of the guarantee offered by the supplier ([a])' ([d]):

This product has been designed to release silver ions during the washing cycle	NO

Additional information([a])'([d]):

Weblink to the supplier's website, where the information in point 9 of Annex II to Regulation (EU) 2019/2023 is found:

(a) this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU) 2017/1369.
(b) for the eco 40-60 programme.
(c) for the wash and dry cycle.
(d) changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
(e) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.'

1) The actual energy consumption will depend on how the appliance is used.
2) The actual water consumption will depend on how the appliance is used and on the hardness of the water.
3) Delivery of the spare parts within 15 working days after having received the order.

Product Data Sheet concerning (EU) 2019/2014

The product data sheet for your appliance can be found online.
Go to https://eprel.ec.europe.eu and enter the model identifier for your appliance to download the data sheet.
The model identifier for your appliance can be found in the technical specifications section.

Remarks:

1. The energy efficiency class is from A(highest efficiency) to D (lowest efficiency)
2. Energy consumption per year, based on 220 standard washing cycles for standard programme at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used.
3. Water consumption per year based on 220 standard washing cycles for standard programme at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.
4. Washing performance class from G (least efficient) to A (most efficient).
5. The standard 60°C programme and the standard 40°C programme are the standard washing programmes. These programmes are suitable to clean normally soiled cotton laundry and they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry. The actual water temperature may differ from the declared cycle emperature.
   Please choose the suitable type of detergent for the various washing temperatures to get the best washing performance with less water and energy consumption.

homie

Was/Droog Combinatie

GEBRUIKERSHANDLEIDING

K-80 WD

Lees deze handleiding

Lees voor gebruik alle instructies en uitleg over de installatie. Volg de instructies zorgvuldig op. Houd de gebruiksaanwijzing bij de hand voor later gebruik.



LET OP: HEET OPPERVLAK !



LET OP: BRANDGEVAAR !

INHOUD

VEILIGHEIDSINSTRUCTIES

- Veiligheidsinstructies 2

INSTALLATIE

- Productbeschrijving 9
- Installatie 10

OPERATIE

- Snel aan de slag 13
- Voor elke wasbeurt 15
- Wasmiddeldispenser 16
- Configuratiescherm 17
- Programma's. 18
- Optie 20

ONDERHOUD

- Reiniging en verzorging 24
- Problemen oplossen 27
- Technische specificaties 28

■ Veiligheidsinstructies

Lees de volgende veiligheidsinformatie grondig door en volg deze strikt op en voorkom het risico op brand of explosie, elektrische schokken materiële schade, persoonlijk letsel of verlies van mensenlevens. Het niet volgen van deze instructies maken elke garantie ongeldig.

⚠Waarschuwing!

Deze combinatie van symbool in signaalwoord duidt op een potentieel gevaarlijke situatie die kan leiden tot de dood of ernstig letsel, tenzij het wordt vermeden.

ⓘ Voorzichtigheid!

Deze combinatie van symbool en signaalwoord duidt op een potentieel gevaarlijke situatie die kan leiden tot dood of ernstig letsel of schade aan eigendommen tenzij het wordt vermeden.

Notitie!

Deze combinatie van symbool in signaalwoord duidt op een potentieel gevaarlijke situatie de kan leiden tot ernstige of lichte verwondingen.

⚠Waarschuwing!

GEVAAR VOOR ELEKTRISCHE SCHOKKEN

- Als het voedingssnoer beschadigd is, moet het worden vervangen door Homie
- Als de machine beschadigd is, mag deze niet worden gebruikt, tenzij gerepareerd door Homie

Risico op elektrische schokken!

VEILIGHEID

• Het apparaat kan worden gebruikt door kinderen vanaf 8 jaar en personen met verminderde fysieke, zintuiglijke of mentale vermogens of gebrek aan ervaring en kennis als ze toezicht of instructies hebben gekregen met betrekking tot het gebruik van het apparaat op een veilige manier en de gevaren begrijpen. Kinderen mogen niet met het apparaat spelen. Reiniging en gebruikersonderhoud mogen niet door kinderen zonder toezicht worden uitgevoerd.
• Kinderen moeten erop letten dat ze niet met het apparaat spelen .
• Kinderen van 3 jaar en jonger moeten uit de buurt van het apparaat worden gehouden of voortdurend onder toezicht worden gehouden.
• Dieren en kinderen kunnen in de machine klimmen. Controleer het apparaat voor elke bewerking.
• Klim niet en ga niet op het apparaat zitten.

INSTALLATIE LOCATIE EN OMGEVING

• Alle was- en extra stoffen moeten op een veilige plaats buiten het bereik van kinderen worden bewaard.
• Installeer het apparaat niet op een tapijtvloer.
• Houd het apparaat vrij van verwarmingsbronnen en direct zonlicht om te voorkomen dat plastic en rubberen onderdelen corroderen.
• Gebruik het apparaat niet in vochtige omgevingen of ruimten die explosief of bijtend gas bevatten.

VEILIGHEID

• Gebruik de machine niet in ruimtes met een temperatuur van minder dan 5°C. Dit kan schade veroorzaken aan delen ervan. Als het onvermijdelijk is, zorg er dan voor dat u het water na elk gebruik volledig uit het apparaat afvoert (zie "Onderhoud - Reiniging van het afvoerpompfilter") om schade door vorst te voorkomen.
• Gebruik nooit brandbare sprays of stoffen in de onmiddellijke nabijheid van het apparaat.

INSTALLATIE

• Dit apparaat is uitgerust met een enkele inlaatklep en kan alleen op de koudwatertoevoer worden aangesloten.
• Netstekker moet na installatie toegankelijk zijn.
• Voordat de kleding voor de eerste keer wordt gewassen, moet het product tijdens alle procedures eenmaal worden gebruikt zonder dat er kleding in zit.
• Voordat de wasmachine wordt gebruikt, moet het product worden gekalibreerd.
• Plaats geen te zware voorwerpen op het apparaat, zoals watercontainers of verwarmingsapparaten.
• De nieuwe slangensets die bij het apparaat worden geleverd, moeten worden gebruikt en oude slangensets mogen niet worden hergebruikt.
• Max. Inlaatwaterdruk 1 MPa. Min. inlaatwaterdruk 0,05 MPa.

ELEKTRISCHE AANSLUITING

• Zorg ervoor dat de voedingskabel niet vastzit door de machine, deze kan beschadigd raken .
• Sluit het product aan op een geaarde uitlaat die wordt beschermd door een zekering die voldoet aan de waarden in de tabel "Technische specificaties". De aardingsinstallatie moet worden gemaakt door een gekwalificeerde elektricien. Zorg ervoor dat de machine is geïnstalleerd in overeenstemming met de lokale regelgeving.

• Water - en elektrische aansluitingen moeten worden uitgevoerd door een gekwalificeerde technicus in overeenstemming met de instructies van de fabrikant en de lokale veiligheidsvoorschriften.

⚠Waarschuwing!

- Gebruik niet meerdere stekkers van verlengsnoeren.
- Het toestel mag geen extern schakelapparaat hebben, zoals een timer of aangesloten op een circuit dat regelmatig wordt in- in uitgeschakeld.
- Trek de stekker niet uit het stopcontact als er brandbaar gas in de buurt is.
- Trek nooit de stekker uit met natte handen.
- Trek altijd aan de stekker, niet aan de kabel.
- Koppel het apparaat altijd los als het niet wordt gebruikt.

WATERAANSLUITINGEN

• Controleer de aansluitingen van de waterinlaatbuizen, de waterkraan en de uitlaatslang op mogelijke problemen als gevolg van veranderingen in de waterdruk. Als de aansluitingen losraken of lekken sluit u de waterkraan en laat u deze repareren. Gebruik het apparaat niet voordat de leidingenen slangen correct zijn geïnstalleerd door gekwalificeerde personen.

• Glazen deur kan erg heet worden tijdens gebruik. Houd kinderen en huisdieren ver weg van de machine terwijl deze in gebruik is.

• De waterinlaat- en uitlaatslangen moeten veilig worden geïnstalleerd en onbeschadigd blijven. Anders kan waterlekkage optreden.

• Verwijder het filter van de afvoerpomp niet terwijl er nog water in het apparaat zit. Grote hoeveelheden water kunnen weglekken en er is een risico op broei door warm water.

BEDIENING EN ONDERHOUD

⚠ Waarschuwing!

- Stop de wasmachinedroger nooit voor het einde van de droogcyclus, tenzij alle items snel worden verwijderd en verspreid, zodat de warmte kan worden afgevoerd.
- De wasdroger mag niet worden gebruikt als industriële chemicaliën zijn gebruikt voor reiniging. Explosiegevaar.

- Gebruik nooit brandbare, explosieve of giftige oplosmiddelen. Gebruik geen benzine en alcohol etc. als wasmiddel. Selecteer alleen wasmiddelen die geschikt zijn voor het wassen in de machine.
- Zorg ervoor dat alle zakken leeg zijn. Scherpe en stijve voorwerpen zoals munten, broches, spijkers, schroeven, stenen etc. kunnen ernstige schade aan deze machine.
- Verwijder alle voorwerpen uit zakken zoals aanstekers en lucifers voordat u het apparaat gebruikt.
- Spoel items die met de hand zijn gewassen grondig af.
- Droog geen ongewassen voorwerpen in het apparaat.
- Items die zijn bevuild met stoffen zoals bakolie, aceton, alcohol, benzine, kerosine, spot removers, terpentijn, was en wasverwijderaars moeten heet worden gewassen met een extra hoeveelheid wasmiddel voordat ze in de toestel.
- Artikelen die schuimrubber (latexschuim)bevatten, douchemutsen, waterdicht textiel, artikelen met rubberen rug en kleding of kussens met schuimrubberen pads, mogen niet in de machine worden gedroogd
- Wasverzachters of soortgelijke producten moeten worden gebruikt zoals aanbevolen in hun instructies.
- Probeer nooit de deur met geweld te openen. De deur gaat kort na het einde van een cyclus open.
- Sluit de deur niet met overmatig geweld. Als het moeilijk wordt gevonden om de deur te sluiten, controleer dan of de kleding goed is geplaatst en verdeeld.

•Koppel het apparaat altijd los en sluit de waterkraan voor het reinigen en onderhouden en na elk gebruik.
• Giet nooit water over het apparaat voor reinigingsdoeleinden. Risico op elektrische schokken!
•Reparaties mogen alleen worden uitgevoerd door de Homie. Homie is niet verantwoordelijk voor schade veroorzaakt door de tussenkomst van niet-geautoriseerde personen.


VERVOER

•Voor transport:
-Opgehoopt water moet uit de machine worden afgevoerd
•Dit apparaat is zwaar. Transport met zorg. Houd nooit een uitstekend onderdeel van de machine vast tijdens het tillen. De machinedeur kan niet als handgreep worden gebruikt.

BEOOGD GEBRUIK

Het product is alleen bedoeld voor thuisgebruik en voor textiel in huishoudelijke hoeveelheden die geschikt zijn voor het wassen en drogen in de machine. Dit apparaat is alleen voor gebruik binnenshuis en niet bedoeld voor ingebouwd gebruik. Alleen gebruiken volgens deze instructies. Het apparaat is niet bedoeld voor commercieel gebruik.
Elk ander gebruik wordt beschouwd als improper gebruik. De producent is niet verantwoordelijk voor eventuele schade of letsel die daaruit kan voortvloeien .
Dit apparaat is bedoeld voor gebruik in huishoudelijke en soortgelijke toepassingen, zoals:
-Personeelskeukens in winkels, kantoren en andere werkomgevingen;
-Vakantieboerderijen;
-Door klanten in hotels, motels en andere woonomgevingen;
-Bed and breakfast type omgevingen;
-Ruimtes voor gemeenschappelijk gebruik in flatgebouwen of in wasserettes.


Product Beschrijving

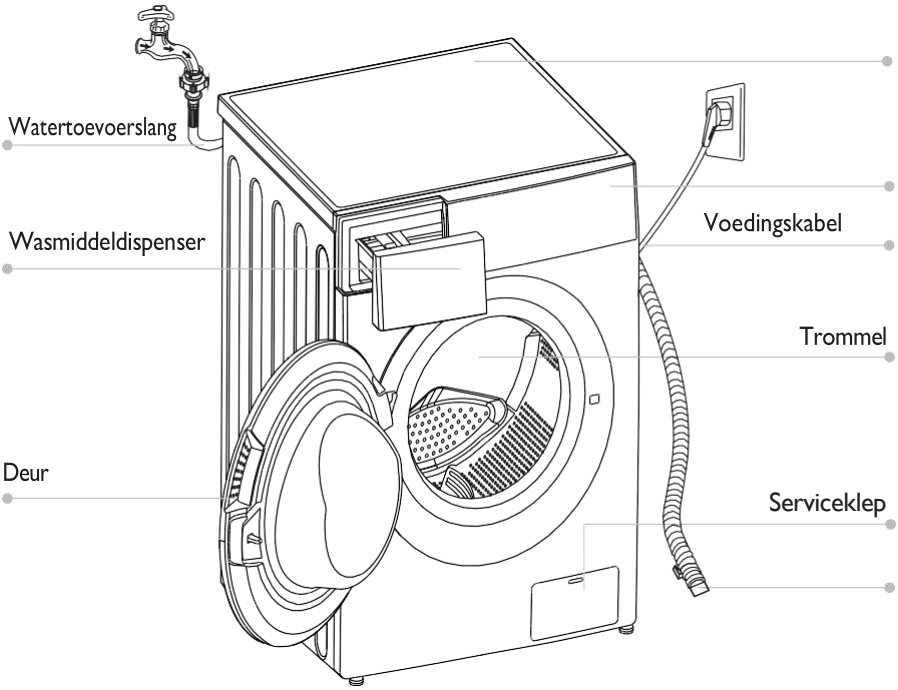

Notitie!

- De productafbeelding is alleen voor illustratie, raadpleeg het echte product als referentie.

Accessoires

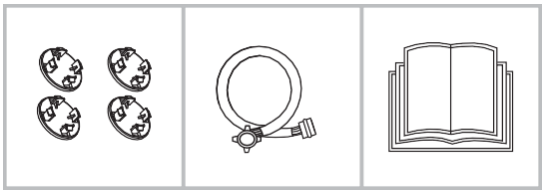


4 x cover caps	1x toevoerslang koud water	1 x handleiding


Installatie

Installatieruimte

⚠Waarschuwing!

• Stabiliteit is belangrijk om te voorkomen dat het product verschuift! Zorg ervoor dat de machine waterpas en stabiel staat.
• Zorg ervoor dat het product niet op het netsnoer staat.
• Zorg ervoor dat u de minimale afstanden tot de muren aanhoudt zoals weergegeven in de afbeelding

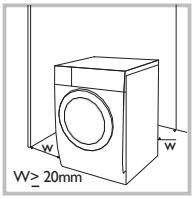

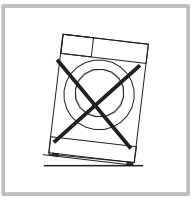

Voordat de machine wordt geïnstalleerd, moet de als volgt gekarakteriseerde locatie worden gekozen:
1.Stijf, droog en vlak oppervlak
2.Vermijd direct zonlicht
3.Voldoende ventilatie
4. Kamertemperatuur is hoger dan 0°C
5. Blijf ver weg van de warmtebronnen zoals kolen - of gasgestookte apparaten.

Uitpakken de wasmachine droger

⚠Waarschuwing!

- Verpakkingsmateriaal (bijv. Films, piepschuim) kan gevaarlijk zijn voor kinderen.
- Er is een risico op verstikking! Houd alle verpakkingen goed uit de buurt van kinderen.



1. Verwijder de kartonnen doos en piepschuim verpakking.
2. Til de wasmachinedroger op en verwijder de basisverpakking. Zorg ervoor dat het kleine driehoekige schuim (a) wordt verwijderd met de onderste verpakking samen. Zo niet, leg het apparaat dan op het zijoppervlak en verwijder het handmatig.
3. Verwijder de tape die het voedingssnoer vastzet via een d-afvoerslang.
4. Verwijder de inlaatslang uit de trommel.

Verwijderen vervoer Bouten

⚠Waarschuwing!


- U moet de transportbouten van de achterkant verwijderen voordat u het product gebruikt.



Maak de 4 transportbouten los met een sleutel.



Verwijder de bouten inclusief de rubberen onderdelen en bewaar ze voor toekomstig gebruik.

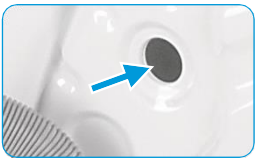


Sluit de gaten met de afdekdoppen.

Rechtzetten van de wasmachine droger

⚠Waarschuwing!

- De borgmoeren op alle vier de voetjes moeten stevig tegen de behuizing worden geschroefd.

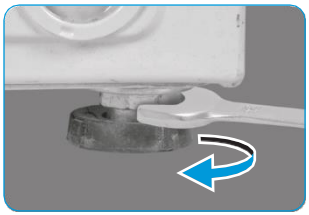


1. Maak de borgmoer los.
2. Draai de voet totdat deze de vloer bereikt.
3. Stel de poten af en vergrendel de moeren met een sleutel. Zorg ervoor dat het apparaat waterpas en stabiel is.

Sluit de watertoevoerslang aan

⚠Waarschuwing!

Om lekkage van waterschade te voorkomen, volgt u de instructies in dit hoofdstuk

- Knik, verbrijzel of wijzig de waterinlaatslang niet.

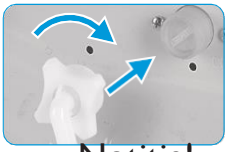

Sluit de watertoevoerslang aan op de waterinlaatklep en een waterkraan met koud water zoals aangegeven.



Notitie!

- Maak handmatig verbinding, gebruik geen gereedschap. Controleer of de verbindingen strak zijn.


Afvoerslang

⚠Waarschuwing!


- Knik of verleng de afvoerslang niet.
- Plaats de afvoerslang op de juiste manier, anders kan schade het gevolg zijn van waterlekkage.

Er zijn twee manieren om het uiteinde van de afvoerslang te plaatsen:

1.Doe het in de waterbak.

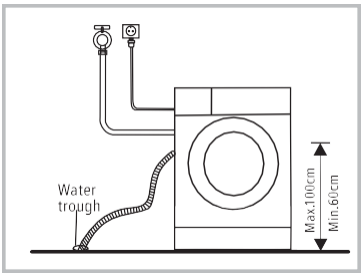

2.Sluit het aan op de aftakingspijp van de trog.

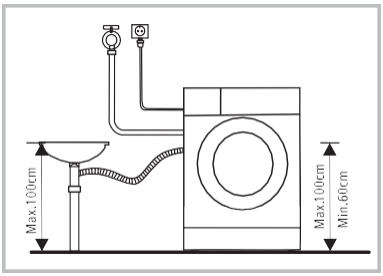

Snel aan de slag

Voorzichtigheid!


- Controleer voor het wassen of de wasmachine goed is geïnstalleerd .
- Uw apparaat is grondig gecontroleerd voordat het de fabriek verliet. Verwijder eventueel restwater om mogelijke geuren te neutraliseren, is het aan te raden om uw apparaat voor het eerste gebruik te reiningen. Beginnen daarom voor het eerst met het katoen programma bij 90°C zonder wasmiddel en wasmiddel.

Calibratie

Het wordt aanbevolen om de wasmachine droger te kalibreren, zodat deze de beste prestaties levert.
Het apparaat is in staat om de hoeveelheid geladen wasgoed te detecteren. Deze functie optimaliseert de prestaties van het product door het energie- en waterverbruik te minimaliseren, waardoor u geld en tijd bespaart. Om deze reden wordt aanbevolen om het apparaat te kalibreren voor optimaal gebruik.

1- Maak de machinetrommel leeg en sluit de deur;
2- Steek de netstekker in het stopcontact;
3- Schakel de wasmachinedroger in en druk tegelijkertijd gedurende 10 seconden op "Temp." en "Dry." totdat "t19" wordt weergegeven;
4- Druk op [▷||] om het toestel te beginnen in wacht tot " **** " wordt weergegeven.

1. Voor het wassen

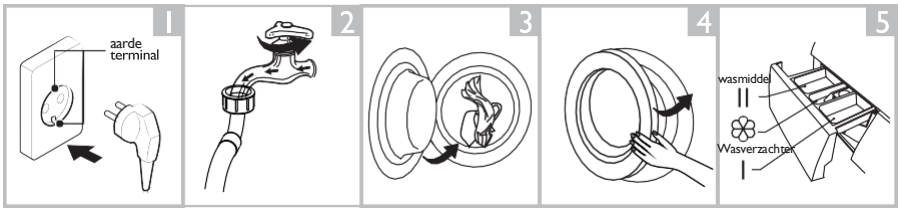


Aansluiten | Open de kraan | Laden | Sluit deur | Wasmiddel toevoegen

Notitie!

- Wasmiddel moet in vak I worden toegevoegd als de voorwasfunctie is geselecteerd.

2. Was

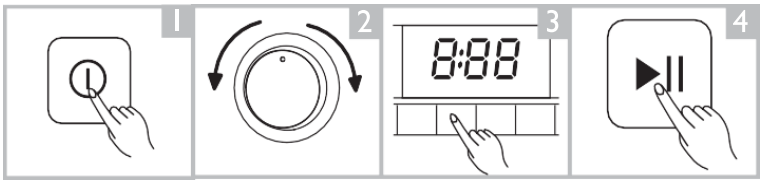


Inschakelen | Selecteer programma | Selecteer functie of standaardinstel-lingen behouden | Druk op Start/Pauze om het programma te starten

3. Na het wassen


Zoemer pieptoon en "Einde" op het display.

■ Voor elke wasbeurt

- De omgevingstemperatuur van de wasmachinedroger moet 5-40°C zijn. Bij gebruik onder 0°C kunnen de inlaatklep en het afvoersysteem beschadigd raken. Als de machine onder vrieskou wordt geïnstalleerd, moet deze worden overgebracht naar de normale omgevingstemperatuur om ervoor te zorgen dat de watertoevoerslang en afvoerslang voor gebruik kunnen worden ontdooid.
- Controleer uw wasverzorgingsetiketten en de gebruiksaanwijzing van het wasmiddel voor het wassen. Gebruik niet-schuimend of minder schuimend wasmiddel.

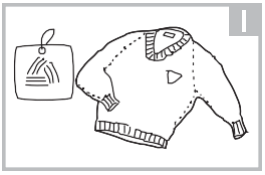


Controleer het onderhoudslabel

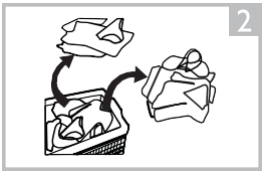


Sorteer wasgoed op kleur en textieltype




Haal alle items uit de zakken

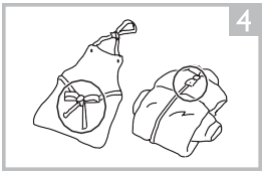

Bind lange textielstrips en riemen aan elkaar, sluit ritsen en knoopjes

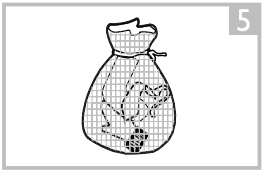

Stop kleine voorwerpen in een waszak

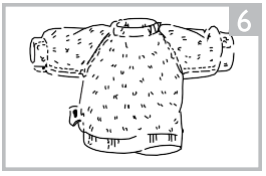


Draai easy-pilling en langpolige stof binnenstebuiten

⚠Waarschuwing!

- Was of droog geen artikelen die zijn gereinigd, gewassen, gedrenkt in of gedept met brandbare of explosieve stoffen zoals was, olie, verf, benzine, alcohol, kerosine en andere brandbare materialen.
- Het wassen van losse kledingstukken kan gemakkelijk grote excentriciteit creëren en veroorzaken door onbalans een alarm. Daarom wordt voorgesteld om er nog een of twee wasartikelen aan de was toe te voegen, zodat het centrifugeren soepel kan worden gedaan.

Wasmiddel Dispenser

I Voorwassen
II Hoofdwas
❀ Wasverzachter
Ontspanknop om de dispenser eruit te trekken

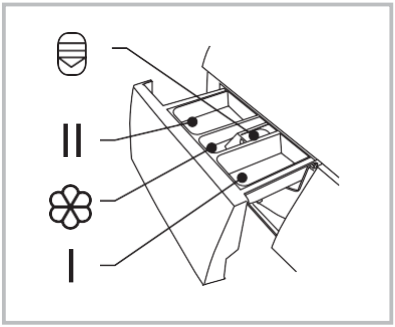

ⓘ Voorzichtigheid!


- Wasmiddel hoeft alleen te worden toegevoegd in "compartiment I" na het selecteren van de voorwasfunctie.

Programma	I	II / 💧	❀
Katoen	○	●	○
Mix	○	●	○
Baby Care	○	●	○
20°C Drum Clean		●	○
Alleen centrifugeren			
Wassen en drogen		●	○

Programma	I	II / 💧	❀
Rinse & Spin			○
Wool		●	○
Eco 40-60		●	○
Intensieve		●	○
Quick 15'		●	○
Alleen drogen			
1 uur W/D		●	○

● Wasmiddel toevoegen ○ optioneel om middel toe te voegen

Configuratiescherm

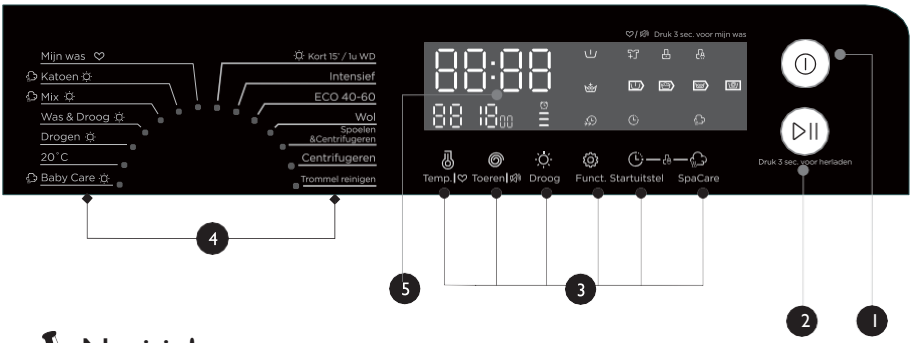

Notitie!

- De grafiek is **alleen** ter referentie, raadpleeg standaard het echte product.

1 aan/uit

Het product is in of uitgeschakeld

2 Beginnen/Breken

Druk op de knop om de Wascyclus te stoppen of pauzeren.

3 Optie


Hiermee kunt u een extra functie selecteren en zal deze oplichten wanneer deze is geselecteerd.

4 Programma's

Beschikbaar volgens het wastype .

5 beeldscherm

Het display toont de instellingen, geschatte resterende tijd, opties en statusberichten voor je wasmachine. Het display blijft gedurende de cyclus ingeschakeld.

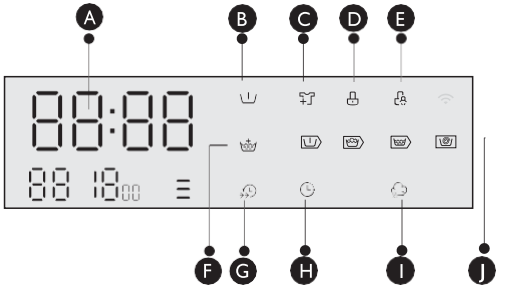

A beeldscherm

Wastijd	Vertragingstijd
t25	2H
Snelheid	Fout
400	E30
Einde	Temp.
End	30

B Pre Wassen **C** Herladen

D Deurslot **E** Kinderslot

F Extra Spoeling **G** Snelheid

H Vertraging **I** Spacare

J Voorwas-was-spoel-spin-

■ Programma 's

	Programma	Lading (kg)	Standaardtijd
		8.0	8.0
☼	Katoen	8.0/6.0	3.39
☼	Mengen	4.0/4.0	1:20
☼	Wassen en drogen	6.0/6.0	5:04
	Alleen drogen	-/6.0	4:14
	20°C	4.0	1:01
☼	Baby Care	4.0/4.0	1:42
	Drum schoon	-	1:18
	Alleen centrifugeren	8.0	0:12
	Spoelen en centrifugeren	8.0	0:20
	Wol	2.0	1:07
	Eco 40-60	8.0	3:35
	Intensief	8.0	3:48
☼	Snel 15'/1u WD	2.0/1.0	0:15

Notitie!

- De Parameters in deze tabel zijn alleen ter referentie van de gebruiker. De werkelijke parameters kunnen verschillen met de parameters in bovenstaande tabel.

■ Programma 's

Programma 's zijn beschikbaar volgens het type wasgoed.

Programma 's	
Katoen	Slijtvast textiel, hittebestendig textiel van katoen of linnen.
Baby Care	De babykleertjes worden met extra zorg gewassen om de gevoelige huid van de baby zoveel mogelijk te beschermen.
Mix	Gemengde lading bestaande uit textiel gemaakt van katoen en synthetische stoffen.
20°C	20°C standaard, kan koud water kiezen.
Eco 40-60	Standaard 40 °C, niet selecteerbaar, suitabale voor wassen bij wasgoed ongeveer 40°C-60°C.
Snel 15' Snel 15' 1u W/D	Extra kort programma geschikt voor licht bevuilde was en een kleine hoeveelheid wasgoed. Voor kleine synthetische kleding of overhemden is de belastingsbeperking 1 kg (ongeveer 4 shirts).
Wol	Hand- of machinewasbare wol of rijkwoltextiel. Vooral zacht wasprogramma om krimp te voorkomen, langere programmapauzes (textiel rust in wasvloeistof).
Spin Only	Extra spin met selecteerbare spinsnelheid.
Rinse & Spin	Extra spoelen met spin.
Intensief	Om de waseffecten te vergroten, wordt de wastijd verlengd.
Drum Clean	Speciaal ingesteld in deze machine om de trommel en buis schoon te makenWanneer dit programma wordt uitgevoerd, kunnen de kleding of andere was niet worden toegevoegd. Wanneer de juiste hoeveelheid reinigingsmiddel wordt ingebracht, zal het reinigende effect beter zijn. De klant kan dit programma regelmatig gebruiken, afhankelijk van de behoefte.
Alleen drogen	Selecteer om kleding te drogen, de temperatuur is anders . De droogtijd hangt af van de hoeveelheid lading .
Wassen en drogen	Het standaard energieprogramma.

Optie

Cycle	Default Temp.(°C)	Standaard centrifugeer snelheid in Rpm	Additional functions
		1400	
Cotton	40	1400	◷, ⊍, 🧺, ⏲, ☁, ☼,
Mix	40	800	◷, ⊍, 🧺, ⏲, ☁, ☼,
Wash and Dry	–	1400	◷, ☼,
Dry Only	–	1400	◷, ☼,
20°C	20	1000	◷, 🧺, ⏲,
Baby Care	60	800	◷, ⊍, 🧺, ⏲, ☁, ☼,
Drum Clean	90	--	◷,
Spin Only	–	1000	◷,
Rinse &Spin	–	1000	◷, 🧺,
Wool	40	600	◷, 🧺,
ECO 40-60	–	1400	◷,
Intensief	40	800	◷,
Snel 15'/1in Witte	Koud	800	◷, ☼,

■ Optie

Delay

Uitstellen

Stel de uitstelfunctie in:

1. Selecteer een programma; 2.Druk op de vertraging knop om de tijd te kiezen (de vertragingstijd is 0-24 H.); 3.Druk op [Start/Pauze] om de vertragingsbewerking te starten



Kies het programma Tijd instellen Beginnen

Annuleer de vertragingsfunctie :

uk de [Uitstellen] knoop in tot 0u in het beeldscherm verschijnt. Het moet ingedrukt zijn voor het starten van het programma. Als de programma al is gestart, eerst het programma uitschakelen om een nieuwe opnieuw in te stellen.

ⓘ Voorzichtigheid!

- Als er een storing is in de voeding terwijl het apparaat in bedrijf is, slaat een speciaal geheugen het geselecteerde programma op en wanneer de stroom opnieuw wordt opgestart, wordt het programma voortgezet.

Voorwassen

Pre Wassen

Met de Voorwassen functie voeg je extra wassen toe voor de hoofdwas wassen, het is geschikt voor was het stof stijgt op naar het oppervlak van de kleding; Er moet wasmiddel in de case (I) worden gedaan wanneer u deze selecteert.

Extra

Extra spoeling

Het wasgoed zal een keer extra worden gespoeld nadat u het hebt geselecteerd.

Snelheid wassen

Snelheid wassen

De functie kan de wastijd verkorten.

♡

Mijn cyclus

Ter herinnering aan het veelgebruikte programma.

Nadat u het programma hebt gekozen en de opties hebt ingesteld, drukt u 3 seconden op [Temp.] voordat u begint met wassen. De standaardinstellingscursus is Katoen.

Temp.

Temp.

Druk op de knop om de temperatuur te regelen (koud, 20 ° C, 30 ° C, 40 ° C, 60 ° C, 90 ° C)

Speed

Snelheid

Druk op de knop om de snelheid te wijzigen.

1400: 0-400-600-800-1000-1200-1400 1500: 0-400-600-800-1000-1200-1400-1500



Herladen

Deze bewerking kan worden uitgevoerd tijdens de wasvoortgang. Wanneer de trommel nog aan het rollen is en er een grote hoeveelheid water met hoge temperatuur in de trommel zit is het onveilig en de deur kan niet met geweld worden geopend. Druk op functie [Start/pauze] gedurende 3 sec. om opnieuw te laden en de kleding toe te voegen.

Volg de onderstaande stappen:


1.Wacht tot de trommel stopt met draaien.

2.Het deurslot is ontgrendeld.

3.Sluit de deur wanneer de kleding opnieuw wordt geladen en druk op [Start/Pauze] knoop.



Druk op[Start/Pause]3sec. Herlaad de kleding Start



SpaCare


SpaCare-functie kan worden geselecteerd door "Katoen", "Mix""Bedlinnen" en "Baby Care" te kiezen. De klanten kunnen de stoom in de trommel zien bij het bedienen van de SpaCare-functie. De SpaCare kan niet gelijktijdig worden gebruikt met Pre Wash en Speed Wash.

! Voorzichtigheid!

- Gebruik de functie Opnieuw laden niet wanneer het waterniveau boven de rand van het binnenbad of de temperatuur hoger is.

Kinderslot

Om mishandeling door kinderen te voorkomen.

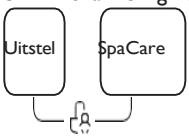

Druk op [Vertraging] en [SpaCare]
3 sec. tot zoemer piept.

Voorzichtigheid!

- Wanneer het kinderslot is geactiveerd en het programma wordt gestart, wordt de indicator voor kinderslot ingeschakeld en worden de CL en de resterende tijd op het display afwisselend weergegeven in 0,5s.
- Alleen het indrukken en ingedrukt houden van de twee knoppen kan de kindervergrendeling ontgrendelen, zelfs uitschakelen, uitschakelen en programma beëindigen
- De "Child Lock" vergrendelt alle knoppen behalve de aan / uit-knop en de Child Lock-knop
- Laat het kinderslot los voordat u het programma selecteert en het wassen van de was start

De zoemer dempen



Kies het programma



Druk 3sec op de knop [Snelheid].
de zoemer is gedempt.

Om de zoemerfunctie te bedienen, drukt u nogmaals gedurende 3 seconden op de knop. De instelling wordt behouden tot de volgende reset.

Voorzichtigheid!

- Na het dempen van de zoemerfunctie worden de geluiden niet meer geactiveerd.

Droog

Druk continu op de knop Drogen om het droogniveau te kiezen: Extra Droog/Normaal Droog (Normaal)/ Zacht Droog(Zacht).


- ☰ Extra droog: Moet onmiddellijk kleding dragen, kan deze functie kiezen;
- = Normaal droog (normaal) : De normale droge procedure;
- – Zacht droog (zacht): Alleen om iets te drogen en dan is het goed;
- ⏲ Getimed droog: Je kan deze functie kiezen om kleding voor een bepaalde tijd te drogen.

Reiniging en verzorging

⚠ Waarschuwing!

- Koppel het apparaat altijd los en sluit de waterkraan voordat u het schoonmaakt en onderhoudt.

De kast schoonmaken

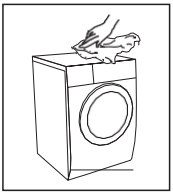

Goed onderhoud aan de wasmachine kan de levensduur verlengen . Het oppervlak kan worden gereinigd met verdund niet-schurende neutrale reinigingsmiddelen indien nodig. Als er wateroverloop is, gebruik dan een doek om het onmiddellijk af te vegen. Gebruik nooit scherpe voorwerpen om het apparaat schoon te maken.

ⓘ Voorzichtigheid!

- Gebruik nooit schurende of bijtende middelen. Mierenzuren van verdunde oplosmiddelen van soortgelijke stoffen daarvan, zoals alcohol of chemische producten.


De trommel schoonmaken

Eventuele roestvlekken die door metalen voorwerpen in de trommel worden achtergelaten, moeten onmiddellijk worden verwijderd met chloorvrije reinigingsmiddelen. Gebruik nooit staalwol voor het reinigen van de trommel!

Notitie!

- Houd wasgoed uit de buurt van het apparaat tijdens het schoonmaken van de trommel.

Reiniging van de deurafdichting en het glas

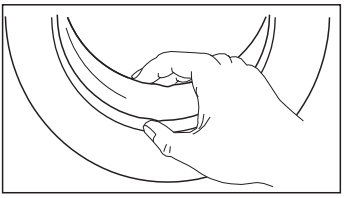


Veeg het glas af en sluit af na elke wasbeurt om pluisjes en vlekken te verwijderen. Als pluis zich ophoopt, kan dit lekkages veroorzaken.
Verwijder alle munten, knopen en andere voorwerpen van de verzegeling na elke wasbeurt.
Reinig de deurafdichting en het glas elke maand om de normale werking van het apparaat te garanderen.


Het inlaatfilter reinigen

Notitie!


- Afnemende waterstroom is een teken dat het filter gereinigd moet worden.

1. Sluit de kraan en verwijder de watertoevoer slang ervan.
2. Reinig het filter met een borstel.
3. Schroef de watertoevoerslang los van de achterkant van de machine. Trek het filter eruit met een lange neustang.
4. Gebruik een borstel om het filter schoon te maken.
5. Plaats het filter opnieuw op de waterinlaat en sluit de watertoevoerslang opnieuw aan.
6. Reinig het Inlet filter om de 3 maanden om de normale werking van het apparaat te garanderen .

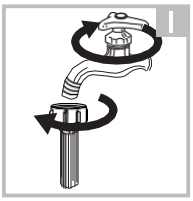

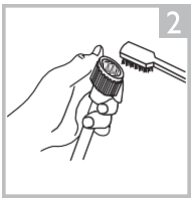




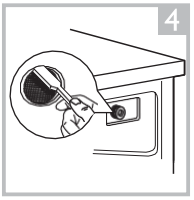


Reinig de wasmiddeldispenser


1. Druk de ontspanknop [] op de deksel van de ontharder en trek de lade van de dispenser uit de uitsparing. Maak de binnenkant van de uitsparing schoon met een borstel.
2. Til het deksel van de ontharder van de lade van de dispenser en was beide items met water.
3. Herstel het deksel van de ontharder en duw de lade terug in de uitsparing.

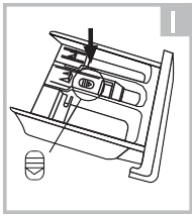


Druk op de release en verwijder de lade van de dispenser

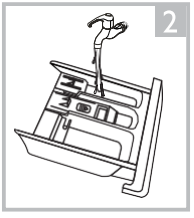

Reinig de lade van de dispenser en het deksel van de ontharder onder water

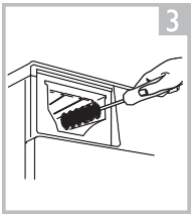

Reinig de uitsparing met een zachte borstel

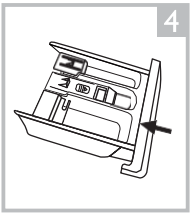

Plaats de lade van de dispenser


Notitie!

- Gebruik geen schuur- of bijtende middelen om plastic onderdelen te reinigen.


Reiniging van het afvoerpompfilter

⚠ Waarschuwing!


- Zorg ervoor dat de machine klaar is met de wascyclus en leeg is. Schakel het uit en koppel het los voordat u het afvoerpompfilter schoonmaakt.
- Wees voorzichtig met warm water. Laat het water afkoelen. Risico op broei!
- Reinig het filter periodiek om de 3 maanden om de normale werking van het apparaat te garanderen.

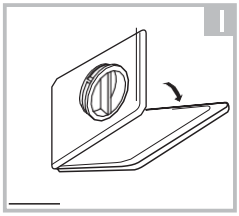


Open de onderste afdekkap

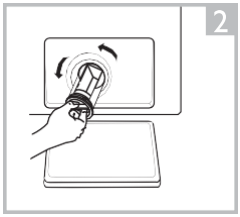

Open het filter door te draaien tegen de klok in

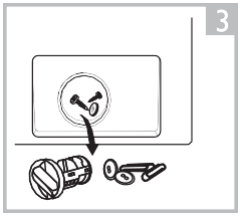

Verwijder vreemde stoffen

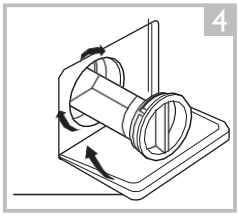

Sluit de onderste dop van de afdekking

ⓘ Voorzichtigheid!

- Wanneer het apparaat in gebruik is in afhankelijk van het gekozen programma kan er warm water in de pomp zitten. Verwijder nooit de pompdeksel tijdens een wascyclus, wacht altijd tot het apparaat de cyclus heeft voltooid en leeg is. Zorg er bij het vervangen van de hoes voor dat deze stevig opnieuw wordt aangedraaid.

Problemen oplossen

Wanneer er een probleem is met het apparaat, controleer dan of u het kunt oplossen volgens de onderstaande tabellen. Als het probleem zich blijft voordoen, neem dan contact op met de klantenservice.

Beschrijving	Mogelijke oorzaak	Oplossing
Toestel start niet	Deur is niet goed gesloten. Kleren zitten vast.	Sluit de deur goed en start opnieuw op. Controleer de was.
Deur kan niet worden geopend	De veiligheidsbescherming is geactiveerd.	Koppel de stroom los en start opnieuw op.
Waterlekkage	Aansluitingen zijn niet strak genoeg.	Controleer en bevestig de waterinlaatpijp . Controleer en reinig de uitlaatslang .
Wasmiddelresten in wasmiddel-dispenser	Wasmiddel is vochtig en/of stolt.	Reinig en veeg de wasmiddeldispenser droog.
Indicator of display werkt niet	Pc-board of harnas hebben verbindingsproblemen .	Schakel de stroom uit en controleer of de netstekker goed is aangesloten .
Abnormaal geluid	Bevestigingsbouten nog steeds op hun plaats. Vloer is niet stevig of vlak.	Controleer of de bevestigingsbouten zijn verwijderd. Zorg ervoor dat het apparaat op een stevige en vlakke vloer is geïnstalleerd .

Foutcodes

Beschrijving	Mogelijke	Oplossing
E30	Deur is niet goed gesloten	Sluit de deur goed en start opnieuw op.
E10	Water injecteren probleem tijdens de wascyclus.	Controleer of de waterdruk hoog genoeg is. Maak de waterleiding recht. Reinig het inlaatklepfilter .
E21	Overuren waterafvoer	Controleer de afvoerslang op verstopping.
E12		Start het toestel
EXX	Anderen	Start het toestel opnieuw op. Als het probleem zich blijft voordoen, neem dan contact op met de klantenservice.

Klantenservice

Reserveonderdelen voor uw apparaat zijn minimaal 10 jaar beschikbaar.
In geval van vragen kunt u contact opnemen met onze klantenservice via:

⚠Waarschuwing!

Risico op electrische schokken

- Probeer nooit een apparaat te repareren dat defect is of vermoedelijk defect is. U kunt het leven van uw eigen en toekomstige gebruikers in gevaar brengen. Alleen erkende specialisten mogen deze reparatiewerkzaamheden uitvoeren.
- Onjuiste reparatie maakt de garantie ongeldig en latere schade kan niet worden herteld!


Vervoer

BELANGRIJKE STAPPEN BIJ HET VERPLAATSEN VAN HET APPARAAT

- Koppel het apparaat los en sluit de waterinlaatkraan.
- Controleer of de deur en de wasmiddeldispenser goed gesloten zijn.
- Verwijder de waterinlaatpijp en de uitlaatslang uit de huisinstallaties.
- Laat het water volledig uit het apparaat lopen (zie "Onderhoud Het afvoerpompfilter reinigen")
- Belangrijk: Plaats de 4 transportbouten opnieuw aan de achterkant van het apparaat.
- Dit apparaat is zwaar. Transport met zorg. Houd nooit een uitstekend onderdeel van de machine vast tijdens het tillen. De machinedeur kan niet als handgreep worden gebruikt.

Technisch Specificaties

Voeding	220-240V ~ .50Hz
MAX. Current	10A
Standaard waterdruk	0,05MPa ~ 1MPa

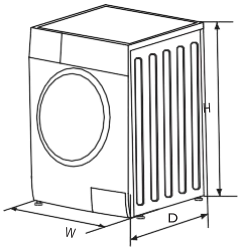

Model	Wascapaciteit vermogen	Dimensie	Nettogewicht	Nominaal
K-80 Witte dwerg	8,0 kg	595 * 475 * 850	65 kg	1900 W

1) Het werkelijke energieverbruik is afhankelijk van hoe het apparaat wordt gebruikt.
2) Het werkelijke waterverbruik is afhankelijk van hoe het apparaat wordt gebruikt en van de hardheid van het water.
3) Levering van de reserveonderdelen binnen 15 werkdagen na ontvangst van de bestelling.

Productgegevensblad betreffende (EU) 2019/2014

Het productinformatieblad voor uw apparaat vindt u online.
Ga naar https://eprel.ec.europe.eu en voer de model-id voor uw toestel in om het gegevensblad te downloaden. De modelidentificatie voor uw toestel vindt u in het gedeelte met technische specificaties.

Opmerkingen:

1. De energie-efficiëntieklasse loopt van A (hoogste efficiëntie) tot D (laagste efficiëntie)
2. Energieverbruik per jaar, gebaseerd op 220 standaard wascycli voor standaardprogramma's bij 60°C en 40°C bij volledige en gedeeltelijke belasting, en het verbruik van de spaarstanden. Het werkelijke energieverbruik is afhankelijk van hoe het apparaat wordt gebruikt.
3. Waterverbruik per jaar op basis van 220 standaard wascycli voor standaardprogramma bij 60°C en 40°C bij volledige en gedeeltelijke belasting. Het werkelijke waterverbruik is afhankelijk van hoe het apparaat wordt gebruikt.
4. Wasprestatieklasse van G (minst efficiënt) tot A (meest efficiënt).
5. Het standaard 60°C programma en het standaard 40°C programma zijn de standaard wasprogramma's. Deze programma's zijn geschikt om normaal vervuild katoenen wasgoed te reinigen en het zijn de meest efficiënte programma's in termen van gecombineerd energie- en waterverbruik voor het wassen van dat type katoenen wasgoed. De werkelijke watertemperatuur kan afwijken van de aangegeven cyclusaccuertuur.
   Kies het geschikte type wasmiddel voor de verschillende wastemperaturen om de beste wasprestaties te krijgen met minder water- en energieverbruik.